

SAILOR 150 FleetBroadband

Quick Guide

Make a voice call

To make a call from your SAILOR FleetBroadband terminal, dial

00 <country code> <phone number> #

Example: Cobham SATCOM in Denmark:

00 45 39558800 #

Note: There are two audio qualities for voice: Standard voice and 3.1 kHz Audio. The default audio quality is Standard voice.

To force the call to use Standard voice, dial 1 * before the number.

To force the call to use 3.1 kHz Audio, dial 2 * before the number.

To make a call **to** the terminal, dial

+<mobile number>

Note: There are two mobile numbers for voice, one for 3.1 kHz Audio and one for Standard voice.

Send a fax

To send a fax from the terminal, dial

00 <country code> <phone number> #

Example: Cobham SATCOM in Denmark:

00 45 39558888 #

Note: For an analog fax, the audio quality must be set to 3.1 kHz Audio.

To force 3.1 kHz Audio, dial 2 * before the number.

To send a fax **to** the terminal, dial



+<3.1 kHz Audio mobile number>

Alternatively you can send a fax directly from your PC using an electronic fax application.



Make a local call

To make local calls between phones connected to the same terminal, do as follows:

- For a local call to an IP handset, dial the number of the IP handset (e.g. **0501**) followed by # or .
- For a local call to an analog phone, dial **0301** followed by # or .

For information on allocation of local numbers, refer to the User Manual.

Access the Internet

To access the Internet do as follows:

1. Connect the LAN cable between your computer and the FleetBroadband terminal.
2. Start up your computer.
3. Open your browser.

If your data connection is automatically enabled, you should now have access to the Internet. If not, you must start a connection as described in the next section.

Start/stop data sessions on LAN.

You can start and stop data sessions with a connected IP Handset (master handset, local no. 0501) or with the terminal's built-in web interface.

IP handset: To start or stop data sessions with the IP handset, do as follows:

1. From the BGAN menu, select **Connect**.
2. Use the left/right keys to find the network user group for the application you want to start or stop.
3. Use the up/down keys to select the connection you wish to start (Active) or stop (Inactive).
4. Select **Start** to start a connection or select **Stop** to stop a connection.

Web interface: Using a connected computer you can also start or stop data sessions from the Dashboard of the terminal's built-in web interface.

To access the web interface, open your browser and enter the IP address of your FleetBroadband terminal. The default IP address is **192.168.0.1**.

To start data sessions from the Dashboard, click the **Start Standard** link under **PROFILES ON LAN**.

For further information, refer to the SAILOR 150 FleetBroadband User manual.